


If your Quantum does not automatically update to the 1B19 software, follow the below procedure. This will only need to be performed once, as all future updates will automatically be recognized. The Dryer must be stopped in order to access all required screens.

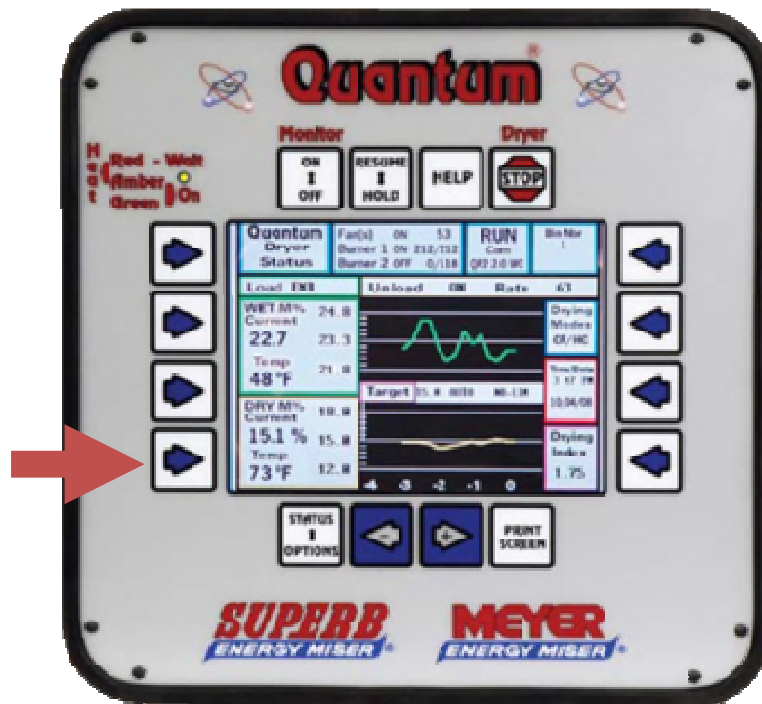

Step 1

If your Quantum shows anything other than 1B 19 in the Program Version, and does not automatically update when the Quantum is rebooted, the following procedure must be followed. If the Program version shows 1A11, the Quantum must be updated by CD first.

System Test	
Model Number SQ24C 32101091MSB	Diagnostics
Program Version 1BEB868H-19 01.06	Screen Saver
Algorithm Information	Modem & Voice Setup
Program & Options Setup	OK

Step 2

!! WARNING !!
AUTHORIZED
PERSONNEL ONLY
Proceed at your
own risk!

QUIT	OK
-------------	-----------



Step 3

Program Setup	
Model	Controls set-up
Language & Units	Shutdown set-up
System Options	Program Variables
External Options	OK

Step 4

Language	
SELECT LANGUAGE ENGLISH	USB DRIVE USB MEDIA - NOT DETECTED
TEMPERATURE °F <input checked="" type="checkbox"/> °C <input type="checkbox"/>	
GRAIN UNITS Bushels <input checked="" type="checkbox"/> M3 <input type="checkbox"/>	
GRAIN WEIGHT Pounds <input checked="" type="checkbox"/> Kg <input type="checkbox"/>	OK


Step 5



Press the Upper Right Button 3 times.

Program Update
Step 1. Press OK to update.
Step 2. Files will be updated & indicated just above OK. After the files are updated, the text will say "UPDATE COMPLETE" if the monitor does not automatically reboot in 10 seconds cycle power.

QUIT	<small>PRESS OK TO CONTINUE</small> OK
-------------	--



Press the 2nd button down on the Right 3 times. IP Update RTB Program will be displayed on screen.

Step 6

Program Update
Step 1. Press OK to update.
Step 2. Files will be updated & indicated just above OK. After the files are updated, the text will say "UPDATE COMPLETE" if the monitor does not automatically reboot in 10 seconds cycle power.

	<small>PRESS OK TO CONTINUE</small> OK
QUIT	

IP UPDATE RTB PROGRAM



Step 7

Once the OK button is pressed, the Quantum will go out and download the latest software update. This might take a few minutes to complete and the Quantum will reboot upon completion.